

01.


Place the 4 leg structures on the grating according to the positions shown in the drawing.


It's important to position the legs so that the seat horizontal supports (where the wooden planks will be attached) are parallel to each other.




02.

Fasten the leg structures to the grating with M10 bolts, nuts and washers.
Use at least 2 bolts per leg.

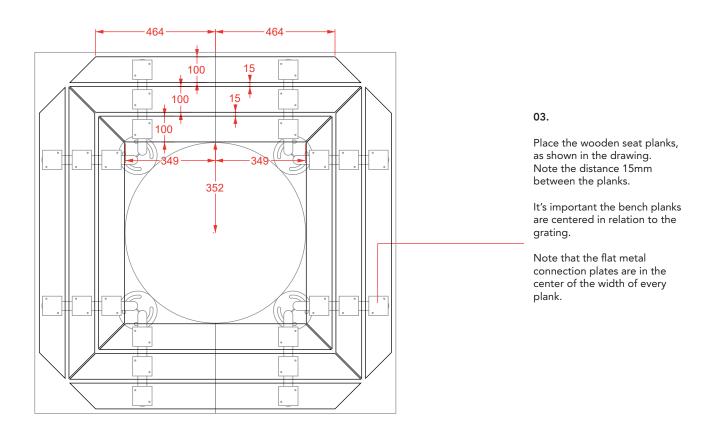

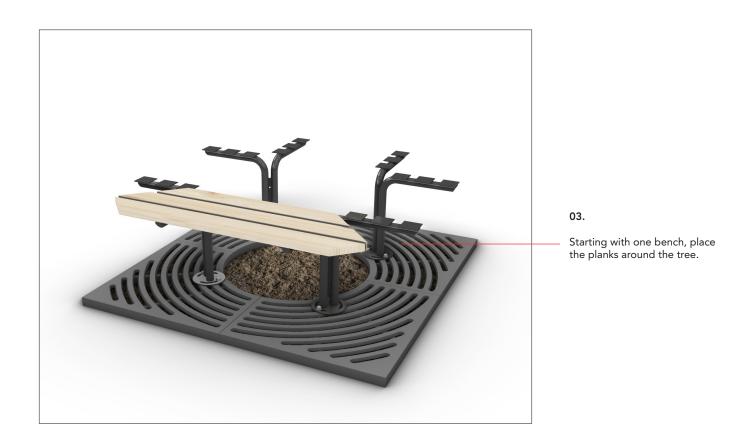

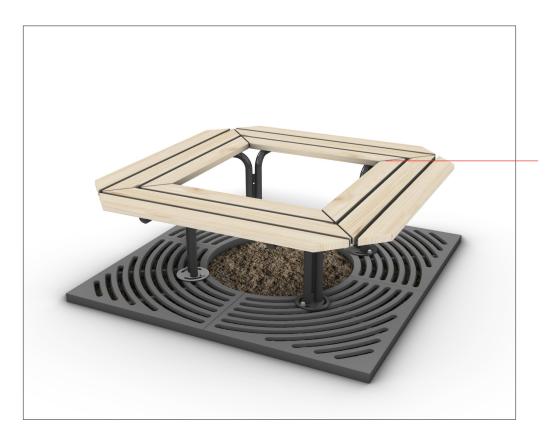

03.


The seat planks should be positioned as shown here.

There is a small 5mm diagonal gap between the planks in the corners



04.

Keeping the placement of the seat planks attach them to the leg structures with the wood screws.

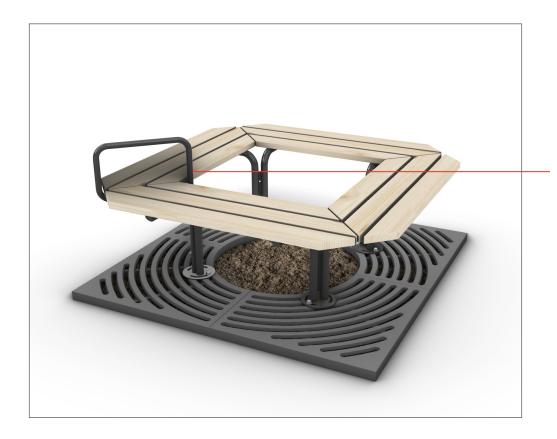

05.

When mounting armrests, position them after the installation of the wooden benches, as shown.



06.

Connect to the leg structure with M8 bolts, nuts and washers.

Make sure the armrest is at 45 degrees in relation to the bench and attach with wooden screws to the underside.



07.

Attach all the armrests as shown.