


Place plank over bracket "ear" Stage 03 :

Attach backrest plank. Place slots in the plank over "ears". note! space 5mm on the sides of the wooden plank.

Use 4 metal M6 screws, conic head with hexagon/star screw length:27mm



MALUS\_ASTRAKAN Bench Assembly instructions

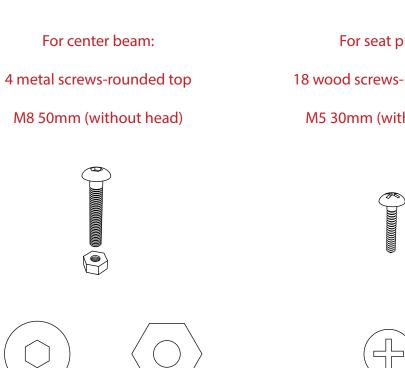

## For seat planks:

18 wood screws-rounded top

M5 30mm (without head)

- 5 -

30


34


4 metal screws-conic top M6 27mm (without head)

For Backrest:





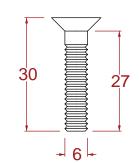

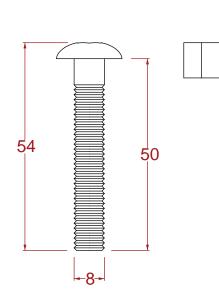

MALUS\_ASTRAKAN Bench Assembly instructions